 


## GETTING STARTED

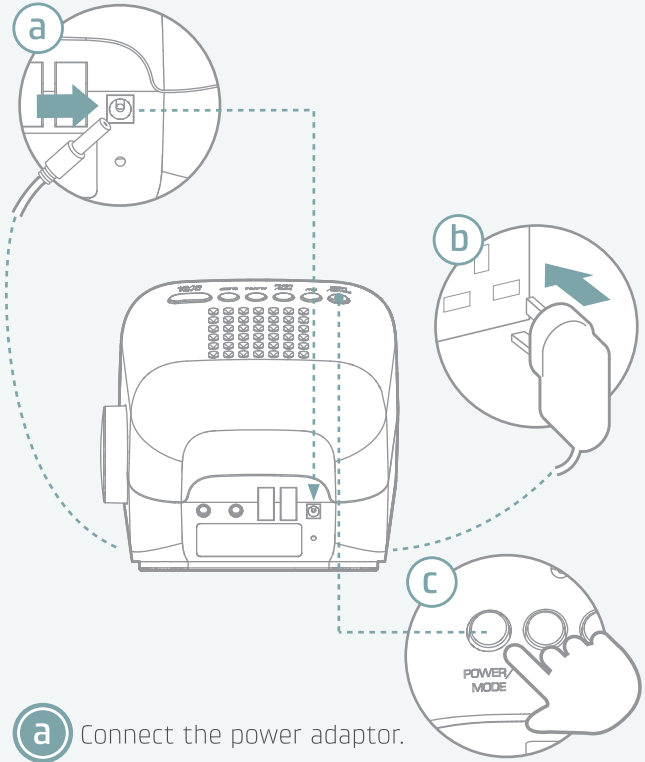

- a** Connect the power adaptor.
- b** Connect the plug to the mains socket.
- c** Press 'Power/Mode' to turn the radio on. The radio will scan for DAB stations and set the time automatically.

## WANT TO KNOW MORE

The full User Manual is available online at:



[www.goodmans.co.uk/support](http://www.goodmans.co.uk/support)

# Goodmans DAB & FM Clock Radio



DAB & FM Clock Radio  
Model: NOD




# THANK YOU

Thank you for choosing a Goodmans product. We've been making electronics for the British people for 70 years. Each of our products has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new DAB & FM clock radio.

Please read the Guarantee & Safety booklet before starting. The full User Manual is available online.

## In the box

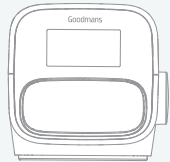

NOD Digital Clock Radio



Power plug



Quick Start Guide



Guarantee & Safety booklet

## USING NOD

### Power & Mode


- a** Short press (<1 sec) to turn on.
- a** Long press (>3 sec) to switch between DAB or FM modes.

### Dial control

- b** Rotate the dial to adjust volume and to cycle through menu options, press to select.
- b** DAB mode: Press and rotate to choose a station, press again to listen.
- b** FM mode: Press and hold to seek.

### Snooze & Backlight


- c** When the alarm is active, press to snooze.
- c** Short press to toggle through dimmer settings.

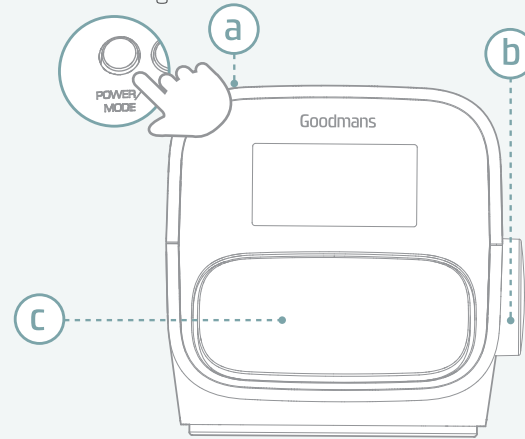

## Setting the Alarm

- a** Press the 'Alarm' button and follow the alarm 'Wizard' instructions to set the alarm.
- b** Press the Alarm on/off button to quickly activate/deactivate alarms.

Raised state - Alarm on  
Lower state - Alarm off

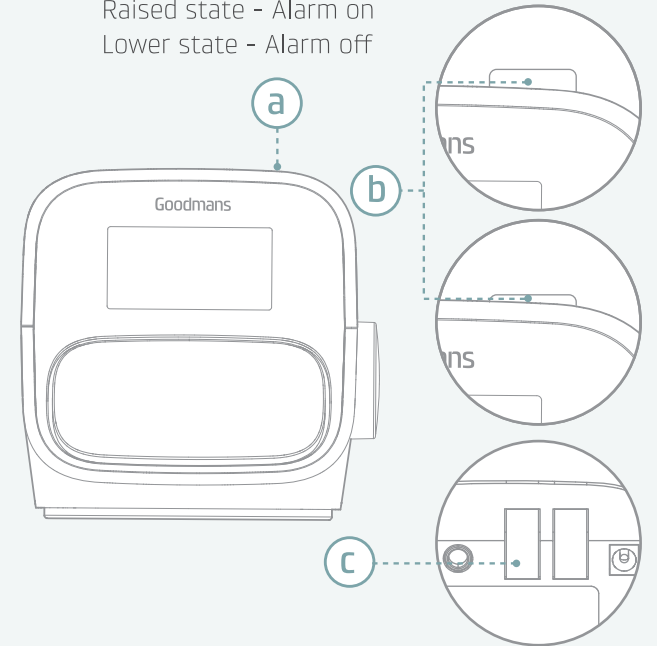

- c** **USB Charging**  
There are 2 USB charging sockets for charging your mobile or tablet devices.